



# MICROWAVE WITH GRILL

## Instruction Manual



## After Sales Support

Now you have purchased a Delta product you can rest assured in the knowledge that as well as your 3 year parts and labour warranty you have the added peace of mind of dedicated helplines and web support:

### **AFTER SALES SUPPORT**

UK/N.IRELAND HELPLINE NO 0871 37 61 020

calls are charged at 7p/min from a standard  
landline calls from mobiles could be higher

REP IRELAND HELPLINE NO 1-800-992 508

WEB SUPPORT [www.medion.co.uk](http://www.medion.co.uk)

**MODEL NUMBER: MD 14482**

# Contents

1	Introduction	3
2	About these instructions	4
3	Proper use	5
4	Package contents	5
5	Safety instructions	6
6	About microwaves	11
7	Cooking and heating up in the microwave	12
8	Overview of the device	15
9	Before the first use of the device	18
10	Operation	20
11	Cleaning and care	31
12	End of operation	32
13	Troubleshooting	32
14	Disposal	33
15	Declaration of conformity:	33
16	Technical data	34

## Introduction

You have made an excellent choice with the purchase of this quality Delta® brand product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Aldi.

We want you to be completely satisfied with your purchase, so this Delta® product is backed by a comprehensive manufacturer's 3 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty, please telephone our Helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have a satisfactory proof of purchase (keep your till receipt safe!). However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled. This does not affect your statutory rights.

# 2

## About these instructions



Read the safety instructions carefully before use. Note the warnings on the device and in the operating instructions.

Always keep the operating instructions close to hand. If you sell the device or give it away, make sure you also hand over these instructions and the warranty card.

### 2.1. Symbols and keywords used in these instructions

	<p><b>DANGER!</b>  <i>Warning: immediate mortal danger!</i></p> <p><b>WARNING!</b>  <i>Warning: possible mortal danger and/or serious irreversible injuries!</i></p>
	<p><b>CAUTION!</b>  <i>Please follow the guidelines to avoid injuries and/or property damage!</i></p> <p><b>ATTENTION!</b>  <i>Please follow the guidelines to avoid property damage!</i></p>
	<p><b>PLEASE NOTE!</b>          Additional information on using the product.</p>
	<p><b>PLEASE NOTE!</b>          Please follow the guidelines in the operating instructions!</p>
	<p><b>WARNING!</b>  <i>Warning: danger of electric shock!</i></p>
	<p><b>WARNING!</b>  <i>Warning: danger of hot surfaces!</i></p>

.	Bullet point/information on operating steps and results
▶	Tasks to be performed

## 3 Proper use

This device may only be used for warming up appropriate foodstuffs in microwave-suitable containers and dishes.

This device is designed to be used in the household. It is not intended, however, for use e.g.

- in commercial kitchens, for employees in shops, offices and other commercial areas;
- in agricultural estates;
- by customers in hotels, motels and other residential facilities;
- in bed & breakfast accommodation.

Please note that we shall not be liable in cases of improper use:

- Do not modify the device without our consent and do not use any auxiliary equipment which we have not approved or supplied.
- Use only spare parts and accessories which we have supplied or approved.
- Follow all the instructions in these operating instructions, especially the safety information. Any other use is deemed improper and can cause personal injury or damage to the product.
- Do not use the device in extreme environmental conditions.

## 4 Package contents

After unpacking, ensure that the following parts have been supplied:

- Microwave MD 14482
- Rotary plate, incl. roller ring
- Grill stand
- Operating instructions and warranty documents

**WARNING**

*Improper handling can cause damage to the device and your health. Please strictly observe the following safety advice:*

### 5.1. People not permitted to use this device


- Keep the device and its accessories out of reach of children.
- This device may be used by children over the age of 8 and by persons with reduced physical, sensory or mental abilities or by those without experience and/or knowledge, if they are supervised or have been instructed in the safe use of the device and have understood the dangers that result from it. Children must not play with the device. Cleaning and user maintenance must not be carried out by children, unless they are aged 8 or over and are supervised.
- Children younger than 8 should be kept away from the device and the mains cable.
- Keep plastic packaging out of the reach of children. There is a risk of suffocation!

### 5.2. Setting up and electrical connection

- The microwave is designed as a free-standing device and may not be integrated into kitchen units.
- Only connect the microwave to a properly installed and earthed power socket with a voltage of 230 V ~ 50 Hz that has at least a 13 Amp fuse. Do not use an extension cable.
- Ensure that the power cable is undamaged and does not run underneath the device or over any hot surfaces or sharp edges.
- The microwave must be set up on a level, stable surface that is able to carry the weight of the device as well as the maximum weight of the food which is to be prepared within it. Only set up

the microwave in a safe, dry environment.

- Do not place any objects on the microwave as these may become hot during use. **To ensure adequate ventilation, a minimum safe clearance distance of 30cm to the top and 20cm on both sides must be observed.** The openings on the device must not be covered or blocked.
- The rear surface of the microwave shall be placed against a wall.
- Protect the device from water droplets or spray. If the device nevertheless comes into contact with water then pull out the plug from the mains socket immediately.
- Ensure that the microwave is not placed near any heat source or in an area where it could come into contact with water.
- The device is not designed to be operated with an external timer or a separate remote control system.

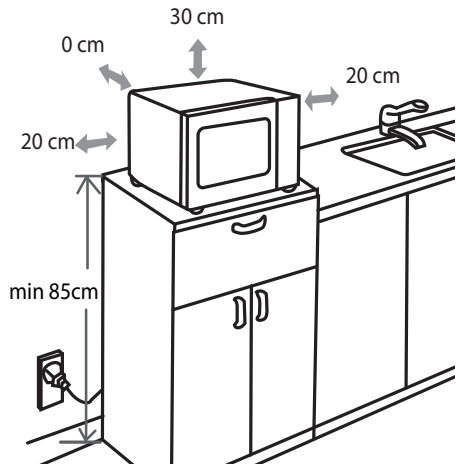

### 5.3. Initial operation and use



#### **WARNING!**

*The touchable surfaces may become very hot during use. There is a risk of burning.*

- **WARNING!** If you use the device in combi or grill mode, children may only use the device under the supervision of adults because of the high temperatures.
- **WARNING!** Liquids or other foods may not be heated in closed containers as these could easily explode. Therefore, always

remove the seal on bottles and closable containers such as baby bottles before heating.

- This device may only be used for warming up appropriate foodstuffs in microwave-suitable containers and dishes.
- When warming up or cooking meals in flammable materials such as plastic or paper containers, it is necessary to monitor the microwave constantly due to the risk of fire.
- The microwave is not intended for the preparation of foods which require frying. The device is also not intended for drying out objects. Attention! This could cause a fire!
- Never use the device in microwave mode when empty, i.e. without items to be cooked inside.
- Only use the accessories that are enclosed or described as suitable in these instructions.
- Never use dishes with metal trimmings, metal utensils or the grill stand in microwave mode as this could damage the device and/or the dishes.
- Ensure that the rotary plate is evenly loaded and that it does not touch the inner metal wall of the device during operation to avoid any sparks.
- After cooking in grill mode, the rotary plate will become very hot! Therefore, always use oven gloves or a protective cloth when removing food from the oven.
- ATTENTION! Sensitive surfaces on the rotary plate. Avoid contact with acidic foodstuffs. The rotary plate could be damaged.
- Use only microwave-suitable dishes. Look for markings such as "Microwave-suitable" or "For the microwave" when purchasing.
- Do not remove any of the microwave's internal panels or the inner coating of the viewing window as this could lead to microwave radiation leakage.



- Never leave the device unattended during operation.
- **WARNING! Delayed boiling!** When heating liquids in the microwave so-called "delayed boiling" can occur, i.e. the liquid has reached boiling temperature without beginning to bubble as boiling liquids normally do.

Agitation, for instance when removing the liquid from the device, can lead to a sudden boiling up of the liquid. Therefore, take care when moving the liquid container.

There is a risk of scalding!

Always place a glass or ceramic rod in liquids that are to be heated up. This will hinder sudden, belated boiling of the liquid.

- With foods that have a firm skin, e.g. sausages or tomatoes, make small slits in the skin so that they do not burst during cooking.
- Do not try to heat up eggs in their shells or pre-boiled eggs unless in specially designed microwave-suitable containers.
- **CAUTION!** Eggs which are already boiled can explode, even after being removed from the oven.
- Check the temperature before eating food cooked in the microwave. Special care must be taken with baby food and bottles. Always stir or shake the baby food before checking the temperature to avoid burns.
- The device should be cleaned regularly and food residues should be removed.
- Poor device hygiene can lead to damage to the surfaces, which in turn can reduce the lifespan of the device and even lead to dangerous situations.
- Observe the instructions for cleaning the device when cleaning the door seals, the interior cooking area and the neighbouring parts, see "11 Cleaning and care" on page 31.

## 5.4. Faults

- Avoid damaging the device or the power cable.
- Always check the power cable and the device for damage before each use.
- Ensure that a defective device is immediately repaired by a specialist workshop. In order to reduce risks: if the mains cable for this device is damaged then it must be replaced by the Medion Service Centre or a similarly qualified person.
- **WARNING!** It is dangerous for untrained persons to carry out repair or maintenance work that requires the removal of the panels which are in place to prevent the escape of microwave radiation.
- If you see smoke, keep the door closed to prevent fire from breaking out, or to smother flames which have already broken out, and immediately turn off the device using the Stop/Cancel button.
- Then pull the plug out of the mains socket straight away.
- **WARNING!** If the housing, panels, door, door seals or the door catch are damaged then do not use the device under any circumstances. Immediately remove the plug from the mains socket. In order to reduce risks: have the device repaired immediately by a specialist workshop or contact your Medion Service Centre.
- **WARNING!** Never try to open and/or repair a device component yourself. There is a risk of electric shock. In the event of a fault, contact our Service Centre or another suitable specialist workshop.

# 6

## About microwaves

---

Microwaves are high-frequency electromagnetic waves that have a warming effect on the food within the oven. Microwaves heat all non-metallic objects. Therefore, do not use any metallic objects in microwave mode. This heating effect works better the higher the water content of the foodstuff.

To ensure optimal distribution of heat, let food stand for a minute or two in the microwave after cooking.

### 6.1. The effect of microwaves on foodstuffs

- Microwaves penetrate foodstuffs to a depth of around 3cm.
- They heat up water, fat and sugar molecules (foodstuffs with a higher water content are heated more intensively).
- This heat then works its way – slowly – throughout the food and has a defrosting, heating and cooking effect on the food.
- The cooking area and the air within are not heated (the food container is heated mainly by the hot food).
- Each foodstuff requires a certain amount of energy to cook or defrost. As a rule of thumb we can say: high output – short time or low output – long time.

### 6.2. The microwave oven

- A microwave generator, the so-called magnetron, generates the microwaves and directs them into the cooking area.
- The inner walls and the viewing window reflect the microwaves inwards so that they cannot escape from the interior.
- The microwave output and the cooking time can be set in several steps.
- After the cooking time has elapsed, or when the door is opened, the magnetron turns off immediately.

## 7.1. General notes

- To arrange food so that it cooks properly place the food with the largest pieces towards the outer edge.
- Note the exact cooking or heating times.
- Choose the shortest available cooking or heating time and extend it if necessary.



### **WARNING!**

*Overcooked food can start to smoke or even catch fire.*

- Cover food during cooking or heating with a cover that is suitable for the microwave. Covering the food helps avoid splashes; furthermore the food is more evenly cooked.
- Foods such as chicken pieces or hamburgers should be turned once during cooking to speed up cooking. Larger pieces such as joints or roasting chickens must be turned at least once.
- It is also important to reposition food, e.g. with meatballs: After half of the cooking time has expired, the food should be repositioned from top to bottom and from the middle to the outside.
- After heating, stir the food if possible to ensure even temperatures, otherwise let the food stand for a short time.

## 7.2. Microwave-suitable materials

You can buy special dishes and accessories for your microwave. Look for markings such as "Microwave-suitable" or "For the microwave". You can also use your existing dishes – if the material is suitable.

### 7.2.1. Suitable materials

- Porcelain, glass ceramic and heatproof glass.
- Plastics which are heatproof and microwave-suitable (Attention: plastics may become discoloured by foods or become warped by the heat)
- Baking paper.



### **ATTENTION!**

*Do not use porcelain, ceramic or plastic containers in grill or grill combi mode. Cling film should also not be used. Due to the very high temperatures the materials could break, warp or even melt*

## **7.2.2. Materials that are partially suitable**

- Stoneware and ceramics. Use clay containers only for defrosting and for short cooking times because the air and water content of the material could cause the clay to crack or break.
- Dishes with gold or silver décor should only be used when the manufacturer has labelled it "microwave-suitable".
- Never use aluminium foil in large quantities. It can however be used e.g. in small pieces to cover sensitive parts. You can also cover the corners of containers to prevent overcooking as the microwave energy is primarily concentrated on the corners. Maintain a distance of 2.5cm between the foil and the internal wall.
- Aluminium containers (e.g. those for ready-to-serve meals) maybe suitable, but they are not recommended. Transfer contents to a known microwave suitable container.

## **7.2.3. Unsuitable materials**

- Metal, i.e. metal pots, pans and lids.




### **ATTENTION!**

*Metal in the cooking area can lead to sparks! These can damage the device or the viewing window! Therefore, only use the supplied grill stand in grill mode.*

- Dishes with metal parts (handles, decoration or bottoms) or with gold or silver décor can also lead to sparks in microwave mode.
- Crystal or lead crystal can shatter, coloured glass may become discoloured.
- Any materials which are not heatproof can lose shape or even burn.




### PLEASE NOTE!

To test whether a dish is suitable for use in the microwave, put some water in the container and place it in the microwave. Press 2 x on the  button. The device will now operate in microwave mode for 1 minute. If you ascertain that the container is hotter than the food, then it is not suitable for the microwave. Microwave-suitable dishes are only warmed by the heat of the food.



### WARNING!

*As soon as you notice sparks, flashes or even fire, then turn off the microwave immediately using the  button.*

## 7.2.4. Overview of suitable materials

The following list is a general guide to help you choose the correct cooking dishes:

Cooking dishes	Microwave	Grill	Combi mode
Heatproof glass	Yes	Yes	Yes
Non-heatproof glass	No	No	No
Heatproof ceramic	Yes	Yes	Yes
Microwave-suitable plastic dishes	Yes	No	No
Kitchen paper	Yes	No	No
Metal	No	Yes	No
Grill stand, included in delivery	No	Yes	No
Aluminium foil/containers	Limited suitability	Yes	Limited suitability

\*Combi mode: Microwave + grill

## 7.2.5. Size and shape of microwave-suitable containers


Flat, broad containers are better than narrow, tall ones. "Flat" foods can be cooked more evenly.

Round or oval containers are better than angular ones. There is a danger of local overheating in the corners.

# 8


## Overview of the device

### 8.1. Description of parts

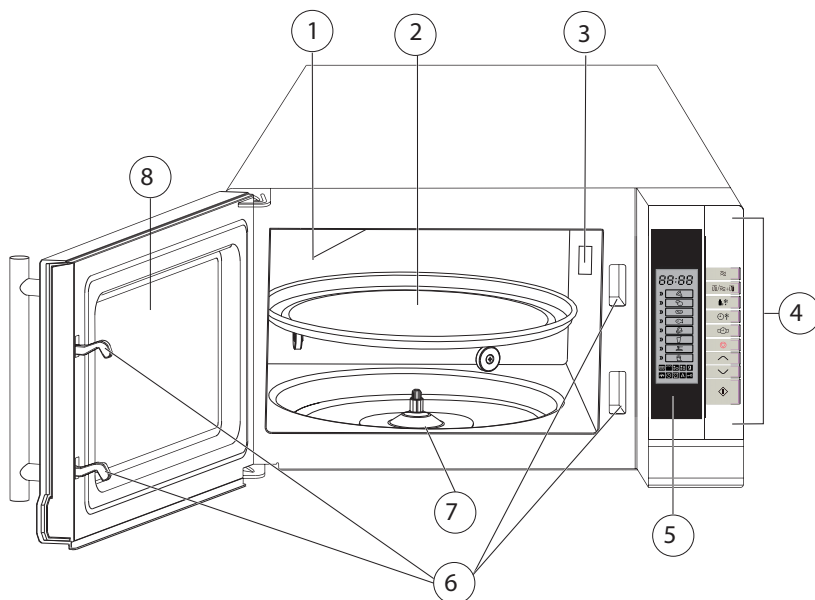

- 1) Upper grill
- 2) Rotary plate
- 3) Magnetron cover **DO NOT REMOVE!**
- 4) Operating field
- 5) Display
- 6) Door lock
- 7) Drive axis
- 8) Viewing window


## 8.2. Operating elements

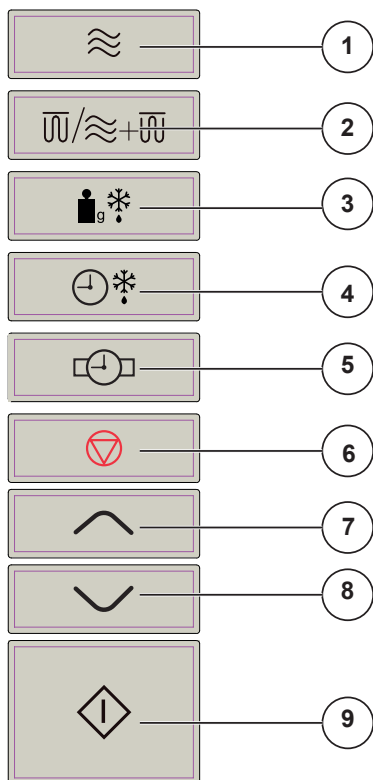

- 1) Set microwave mode
- 2) Set combi mode microwave + grill
- 3) Set defrosting mode according to weight
- 4) Set defrosting mode according to time
- 5) Set time / time format / start of cooking time
- 6) Cancel entry; press once: briefly interrupt programme, press twice: prematurely end programme; press longer: activate child lock
- 7) Increase input value
- 8) Reduce input value
- 9) Start device;  
confirm entry;  
start automatic programme





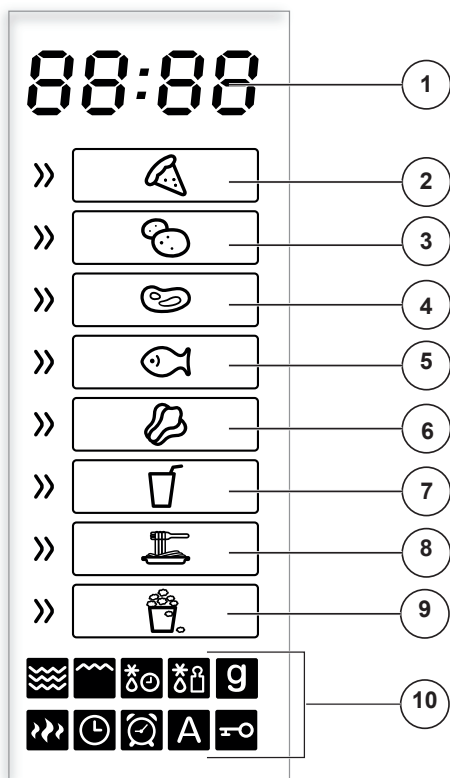







## 8.3. Display



- 1) Time display/duration of the cooking programme or the weight
- 2) Automatic programme A-1: Pizza
- 3) Automatic programme A-2: Potatoes
- 4) Automatic programme A-3: Meat
- 5) Automatic programme A-4: Fish
- 6) Automatic programme A-5: Vegetables
- 7) Automatic programme A-6: Drinks
- 8) Automatic programme A-7: Pasta
- 9) Automatic programme A-8: Popcorn
- 10) Operating displays

## 8.4. Operating displays

Display	Function
	Microwave mode
	Grill mode
	Defrosting mode according to time
	Defrosting mode according to weight
	Weight is set
	Operating symbol
	Time is set
	Timer is activated
	Automatic programme mode
	Child lock in use

## 9

### Before the first use of the device

#### 9.1. Setting up the device

Ensure that all packaging materials have been removed from inside the device and the interior of the door.



#### ATTENTION!

*The screw-fastened cover in the interior of the oven is not part of the packaging and should not be removed!*



### **WARNING!**

*Check the microwave for any damage – e.g. if the door is crooked or bent, door seals and other seals are damaged, hinges and the closing mechanism are defective or loose, or if the interior of the device or the door are dented or damaged. If you discover any damage, do not use the microwave. In this case, please contact the Medion Service Centre.*

- Do not place the microwave near to any heat sources, in a location prone to wetness or high humidity, or in the immediate vicinity of flammable materials.
- The feet must not be removed.








### **ATTENTION!**

*The microwave has been designed for household use and may not be used outside!*

- Connect the microwave to a convenient and easily accessible 230 V~50 Hz earthed power socket.

## **9.2. Heating the device while empty**

Before using the microwave, you must first heat it up whilst empty in order to remove any remains left over from production. Turn on the device without any food and without accessories as described below in grill mode:

- ▶ Open the door and remove any remaining packaging or accessories from the oven.  
Close the door.
- ▶ Press the  button until  is shown on the display.
- ▶ Press the  button and then the  button until you have set a cooking time of 10 minutes.
- ▶ Press the  button again to start the heating process.



### **PLEASE NOTE**

During this initial heating period you may notice faint odours. These smells are not dangerous and will disappear after a short time. Ensure adequate ventilation e.g. by opening a window.

- ▶ After 10 minutes, the device turns itself off automatically. Wait until it has

completely cooled down.

- ▶ Remove the plug from the mains socket and then clean the device once more inside and out with a damp cloth and dry the microwave off carefully.

### 9.3. Inserting accessories

When you have heated the microwave once in an empty state as described above, it may no longer be used without the rotary plate inserted properly.

- ▶ Place the rotary plate over the centre of the drive axis.

## 10 Operation







Every time a button is pressed you will hear an beep to confirm.

### 10.1. Setting the clock time

When the microwave is used for the first time or the power supply is broken, the display will show "0:00" and the time (24-hour display) needs to be set.





- ▶ Press the  button once.

The hour display flashes.

- ▶ Press the  or  buttons to set the hours.
- ▶ Press the  button again.
- ▶ Press the  or  buttons to set the minutes.
- ▶ Press the  button again.


The time is now set.



### 10.2. Child lock

- ▶ In order to activate the child lock, press the  button and hold it down for approx. 3 seconds. You will hear a beep and the display will show the  symbol. The microwave's buttons will now have no function.
- ▶ To deactivate the child lock, press and hold down the  button again for 3 seconds until you hear a beep and the  symbol disappears from the display. All functions are now available again.


## 10.3. Setting the kitchen timer (countdown)

- ▶ Press the  button twice.

The  symbol will be shown on the display.




- ▶ Press the  or  buttons to set the desired time in minutes and seconds (0:00).
  - Press repeatedly: changes the setting in 5, 10 or 50 second intervals
  - Press for longer: moves quickly through the setting options

The longest time that can be set is 95 minutes.

- ▶ Press the  button. The countdown starts.



### PLEASE NOTE

In order to briefly interrupt the countdown, press the  button once and then press the  button to continue the countdown. In order to end the countdown, press the  button twice.

## 10.4. End of the cooking process

At the end of every cooking process, you will hear a number of beeps and the time will be shown again on the display. The cooking process is now finished. The display will also go blank after a short period of time. The interior lighting in the microwave will automatically switch on and off when the door is opened or closed.






### CAUTION!

*As the food or containers may be very hot, always use oven gloves or a protective cloth when removing food from the oven.*


## 10.5. Interrupting a programme


If you want to turn or stir the food, for instance mid-way through the cooking, it is often necessary to interrupt the programme.





- ▶ Open the door or press the  button to interrupt the programme. The remaining cooking time is still shown on the display.
- ▶ Once you have closed the door again, press the  button to resume the cooking process.
- ▶ Press the  button twice in order to prematurely stop the programme completely.

## 10.6. Cooking with microwaves


To cook with microwave energy alone, proceed as follows:

- ▶ Press the  button once or repeatedly to select the power output level as shown in the following table:


Press the  button	Readout on the display	Output in watts
1 x	P100	800
2 x	P80	640
3 x	P50	400
4 x	P30	240
5 x	P10	80

- ▶ Confirm your selection by pressing the  button.
- ▶ Press the  or  buttons to set the desired cooking time in minutes and seconds (0:00).
- ▶ Start the cooking process by pressing the  button.

## 10.7. Quick start

If you press the  button without previously setting the power output level, the cooking programme will start at the maximum level (800 watts) in microwave mode.

The longest cooking time is 95 minutes.

- ▶ Press the  button repeatedly until the desired cooking time is displayed (each time the button is pressed it extends the cooking time by 30 seconds).

The cooking process starts immediately.

## 10.8. Grill mode

The grill function is particularly useful for thinly sliced meat, steaks, mince, kebabs, sausages or chicken pieces. It is also suitable for grilled sandwiches and gratins.

In grill mode, you can use the grill stand supplied for cooking suitable foods.

The longest grilling time is 95 minutes.



### ATTENTION!

*Note the minimum safe distances recommend for the device and under no circumstances cover the ventilation slots. Do not place any objects on the device.*

- ▶ Press the  $\overline{\text{M}}/\approx+\overline{\text{M}}$  button once to select grill mode:
- ▶ Confirm your selection by pressing the  $\diamond$  button.
- ▶ Press the  $\frown$  or  $\smile$  buttons to set the desired cooking time in minutes and seconds (0:00).
- ▶ Start the cooking process by pressing the  $\diamond$  button.



### PLEASE NOTE

After half of the cooking time has elapsed, you should turn over the food to optimise the cooking process (see “10.5. Interrupting a programme” on page 21). Open the door and turn over the food. Then press the  $\diamond$  button again to continue with the cooking programme.

## 10.9. Combi mode: microwave and grill modes

The device can be operated in both microwave and grill modes together. The maximum cooking time for all programmes is 95 minutes.

- ▶ Press the  $\overline{\text{M}}/\approx+\overline{\text{M}}$  button two or three times and select the programme option. The following programme options are available:

Press the $\overline{\text{M}}/\approx+\overline{\text{M}}$ button	Function/output in %	Display
2 x	Microwave (55%) and grill (45%) modes	$\text{[-1]} + \text{[microwave icon]} + \text{[grill icon]}$
3 x	Microwave (36%) and grill (64%) modes	$\text{[-2]} + \text{[microwave icon]} + \text{[grill icon]}$

- ▶ Press the  $\diamond$  button to confirm the programme selection.
- ▶ Press the  $\frown$  or  $\smile$  buttons to set the desired cooking time in minutes and seconds (0:00).
- ▶ Start the cooking process by pressing the  $\diamond$  button.






#### PLEASE NOTE




If required, open the door after about half of the set cooking time has elapsed and turn over the food to guarantee even cooking.

### 10.10. Defrosting according to weight

You can set the defrosting programme based on the weight of the food. Weights from 100g to 2000g can be set.

- ▶ Place the frozen food in a suitable container into the oven and close the door.
- ▶ Press the  button to start the device in defrosting mode according to weight.

DEF1,  and  will be shown on the display.

- ▶ Press the  or  buttons to set the weight of the food.
- ▶ Press the  button. The programme starts.






#### PLEASE NOTE




If required, open the door after about half of the cooking time has elapsed and turn over the food to guarantee even defrosting.

### 10.11. Defrosting according to time

You can set the duration of the defrosting programme. The longest defrosting time is 95 minutes.

- ▶ Place the frozen food in a suitable container into the oven and close the door.
- ▶ Press the  button to start the device in defrosting mode according to time.

DEF2,  and  will be shown on the display.

- ▶ Press the  or  buttons to set the desired cooking time in minutes and seconds (0:00).
- ▶ Press the  button. The programme starts.



#### PLEASE NOTE

If required, open the door after about half of the cooking time has elapsed and turn over the food to guarantee even defrosting.





## 10.12. Using multiple programmes

The device can carry out multiple programmes consecutively. Up to 2 programme sequences can be programmed to run automatically.

Set each cooking programme as described but only press the  button when the last cooking programme has been set .

### Example:

You want to defrost food with a defrosting programme and then subsequently start the grill programme.

- ▶ Set the defrosting programme as described in “10.10. Defrosting according to weight” on page 24 without subsequently pressing the  button.
- ▶ Then set the grill programme as described in “10.8. Grill mode” on page 22.
- ▶ Now press the  button to start the programme.

Both programmes will now run consecutively.

## 10.13. Automatic cooking

In automatic cooking, it is not necessary to enter the cooking time or power output level. The microwave automatically works out the values depending on the food being cooked and its weight.

In the table, you can see an overview of the automatic programmes with the readout shown on the display and the relevant operating modes used.

Readout on the display	Programme	Operating modes	
		Microwave	Grill
A-1	Pizza	■	■
A-2	Potatoes	■	
A-3	Meat	■	
A-4	Fish	■	
A-5	Vegetables	■	
A-6	Drinks	■	
A-7	Pasta	■	
A-8	Popcorn	■	




### 10.13.6. Setting an automatic programme

- ▶ In standby mode, press the  button. A programme number (e. g. “A-1”


for automatic programme 1) and the symbol for the corresponding cooking programme will be shown on the display.

Select an automatic programme between 1 and 8.

The relevant symbol will flash.

- ▶ Press the  button to confirm the selection.
- ▶ Now select the desired weight or amount. Press the  or  buttons here until the desired portion size is displayed. The weight/amount will be shown on the display. The amounts can be set in line with the following table:

Programme	Weight		
A-1 Pizza (g)	200	400	
A-2 Potatoes (g)	200	400	600
A-3 Meat (g)	250	350	450
A-4 Fish (g)	250	350	450
A-5 Vegetables (g)	200	300	400
A-6 Drinks (container, each holding 140 ml)	1 container	2 containers	3 containers
A-7 Pasta (g)	50 (+ 450 ml water)	100 (+ 800 ml water)	
A-8 Popcorn (g)	50	85	100

- ▶ Press the  button to start the cooking process.
- ▶ The cooking programme will end automatically and five beeps will sound.

If the food is not fully cooked through, cook it for a few minutes more in microwave or grill mode. If you finish cooking using the grill function, the level of browning of the food will increase.



#### **WARNING!**

*There is a risk of fire. Do not leave the device unattended during operation*



### ATTENTION!

*When using programmes including the grill mode, under no circumstances use lids or dishes that are not heatproof as these could melt or catch fire!*

*After cooking in grill mode, the rotary plate is very hot! Therefore, always use oven gloves or a protective cloth when removing food from the oven.*



### PLEASE NOTE:

Please bear in mind that the size, form and sort of food can influence the cooking results.






## 10.13.7. Programme A-1: Pizza

This programme uses both microwave and grill modes and is designed to reheat pizza.



### ATTENTION!

Do not use any covers as the device operates in grill mode in this programme.






- ▶ Place the pizza onto the rotary plate included in the delivery.
- ▶ Select the pizza programme by pressing the  button.
- ▶ Press the  button and then press the  or  buttons to select the weight of the pizza.
- ▶ Start the cooking programme for pizza by pressing the  button.

If the pizza is not hot enough after heating, start another cooking process in microwave mode (as described from “10.6. Cooking with microwaves” on page 22).

## 10.13.8. Programme A-2: Potatoes

This programme uses the microwave mode. Use a microwave-suitable container for heating the food. We recommend using unpeeled potatoes for cooking. Prick a few holes in the skins of the potatoes.






- ▶ Place the unpeeled potatoes in the container. Use potatoes that are, as far as possible, similarly sized. If possible, the potatoes should not touch each other.

- ▶ Place the container in the middle of the rotary plate.
- ▶ Select the potato programme by pressing the  button.
- ▶ Press the  button and then press the  or  buttons to select the weight of the potatoes (200-600g).
- ▶ Start the cooking programme for potatoes by pressing the  button.

If the potatoes are not fully cooked through after cooking, start another cooking process in microwave mode (as described from “10.6. Cooking with microwaves” on page 22).

### 10.13.9. Programme A-3: Meat

This programme uses microwave mode. Use a microwave-suitable container.

- ▶ Place the meat on a plate that is suitable for microwave. Season the meat as required. Place the plate in the middle of the rotary plate.
- ▶ Select the meat programme by pressing the  button.
- ▶ Press the  button and then press the  or  buttons to select the weight of the meat (250-450g).
- ▶ Start the cooking programme for meat by pressing the  button.

If the meat is not thoroughly cooked after the cooking process and you want to brown the meat, start another cooking process with the combi mode microwave + grill (as described from “10.9. Combi mode: microwave and grill modes” on page 23).



#### ATTENTION!

*Do not use any covers as the device operates using the grill in combi mode.*








#### PLEASE NOTE:

If you are cooking beef and you prefer your beef well-done, select a weight level that is higher than the actual weight of the food.

### 10.13.10. Programme A-4: Fish

This programme uses microwave mode. Use a microwave-suitable container.

- ▶ Place the fish on a plate that is suitable for microwave. Season the fish as required. Place the plate in the middle of the rotary plate.
- ▶ Select the fish programme by pressing the  button.
- ▶ Press the  button and then press the  or  buttons to select the weight of the fish (250-450g).
- ▶ Start the cooking programme for fish by pressing the  button.

If the fish is not thoroughly cooked after the cooking process and you want to brown the fish, start another cooking process with the combi mode microwave + grill (as described from “10.9. Combi mode: microwave and grill modes” on page 23).








#### **ATTENTION!**

*Do not use any covers as the device operates using the grill in combi mode.*

### 10.13.11. Programme A-5: Vegetables






This programme uses microwave mode. Use a microwave-suitable container for heating the food.

- ▶ Place the vegetables in the container with a little water.
- ▶ Place the container in the middle of the rotary plate.
- ▶ Select the vegetable programme by pressing the  button.
- ▶ Press the  button and then press the  or  buttons to select the weight of the vegetables (200-400g).
- ▶ Start the cooking programme for vegetables by pressing the  button.

If the vegetables are not fully cooked through after cooking, start another cooking process in microwave mode (as described from “10.6. Cooking with microwaves” on page 22).

### 10.13.12. Programme A-6: Drinks

This programme uses microwave mode. Use a microwave-suitable container for heating the food.






- ▶ Place the drink that you want to heat up on the rotary plate in the oven. If you place multiple containers in the microwave oven then please ensure that the containers are not touching each other.
- ▶ Select the drinks programme by pressing the  button.
- ▶ Press the  button and then press the  or  buttons to select the number of cups (1-3 containers, each holding 140 ml of liquid).
- ▶ Start the cooking programme for drinks by pressing the  button.

If the drink/drinks are not hot enough, start another cooking process in microwave mode (as described from “10.6. Cooking with microwaves” on page 22).

### 10.13.13. Programme A-7: Pasta

This programme uses microwave mode.

When cooking pasta, use a high container otherwise there is a risk of overcooking. Use as much water as for conventional cooking.






- ▶ Place the container holding the pasta in the middle of the rotary plate.
- ▶ Select the pasta programme by pressing the  button.
- ▶ Press the  button and then press the  or  buttons to select the weight of the pasta (50-100g).
- ▶ Start the cooking programme for pasta by pressing the  button.

If the pasta is still too hard after cooking, start another cooking process in microwave mode (as described from Page 22).

### 10.13.14. Programme A-8: Popcorn

This programme uses microwave mode.

Use standard popcorn packaging that is designed for producing popcorn in a microwave.

- ▶ Place the packaging onto the rotary plate.
- ▶ Select the popcorn programme by pressing the  button.
- ▶ Press the  button and then press the  or  buttons to select the weight of the popcorn (50-100g).
- ▶ Start the cooking programme for popcorn by pressing the  button.

If the popcorn has not completely popped after the cooking time has elapsed, start another cooking process in microwave mode (as described from “10.6. Cooking with microwaves” on page 22).

## **Cleaning and care**

Poor device hygiene can lead to damage to the surfaces, which in turn can reduce the lifespan of the device and even result in dangerous situations. Therefore, clean the microwave regularly and remove all remaining food.

- Switch the microwave off and pull the plug from the mains socket before cleaning.
- Keep the interior of the microwave clean. Wipe away splashes or spilled liquids that attach to the microwave walls with a damp cloth. A mild cleaning solution can be used for persistent food deposits. Do not use sprays or other caustic detergents as these could attack, scratch or dull the door surface.
- The external surfaces should be cleaned with a damp cloth. In order to prevent damage to the microwave's internal operating parts, avoid allowing water to penetrate into the ventilation openings.
- Parts of the door, the viewing window, and especially the seal and the closing mechanism should be cleaned carefully with a mild detergent solution. Pay great attention to avoid damage to these parts.
- The operating field may not become wet. Clean with a soft, damp cloth. When cleaning the operating field, leave the door of the microwave open to prevent the device being switched on by accident.
- If steam collects inside or on the external areas, wipe it away with a soft cloth.
- Steam may occur if the microwave is used with high humidity; this is normal.
- The metal rotary plate must be removed occasionally for cleaning. Wash the plate in warm water with a mild soap solution or in the dishwasher.
- Then dry the rotary plate thoroughly with a soft cloth.
- Simply wipe the floor of the microwave with a mild cleaning solution.
- Odours remaining in the microwave can be removed by placing a glass of water with the juice and rind of a lemon into a deep container that is suitable for microwave use and heating for 5 minutes. Wipe out thoroughly and dry with a soft cloth.
- If you have to replace the light in the microwave, please contact a qualified specialist workshop or Medion Service.

## 12 End of operation

A number of beeps will sound when the cooking process is complete. Open the door and remove the cooked food. The time will be displayed and the device will now be in standby mode.

If you want to completely switch off the device or do not intend to use it for a long period of time, pull out the plug from the mains socket and store the device in a dry location.

## 13 Troubleshooting

Problem	Possible cause	Solution
The device will not start	The mains plug is not properly inserted.	Pull out the plug, wait 10 seconds and then plug it back in again.
	The fuse is blown or the power interrupter has tripped.	Replace the fuse or reset the power interrupter (contact our service centre to do this).
	The socket is defective.	Check the socket by plugging in another device.
The device does not warm up.	The door is not closed.	Close the door.



## 14 Disposal

---



### Device

At the end of its life ensure that the device is disposed of in an environmentally appropriate manner. This may be a local collection point for old devices. Seek the advice of your local authority about the local options for disposing of waste.

- ▶ Before disposal cut off the cable.



### Packaging

Your microwave is wrapped in packaging to protect it against transportation damage. Packaging materials are raw materials and can therefore be reused or recycled.

## 15 Declaration of conformity:

---

The EU Declaration of Conformity is available upon request.

# 16

## Technical data

---

Nominal voltage 230 V ~ 50 Hz

### Power output

Microwave: 800 W

Grill: 1000 W

Microwave frequency: 2450 MHz

### Dimensions (W x H x D) in cm

Device: 46 x 29 x 34

Cooking area volume: 20 litres

Net weight: 13.1 kg



**Subject to technical changes!**



MICROWAVE WITH GRILL

---

## 3 YEAR WARRANTY CARD

---

Name 

---

Address 

---

---

---

Email 

---

Tel No 

---

Product No. MD 14482

MSN 5004 4789

Location of purchase 

---

In order to deal with your enquiry as quickly and efficiently as possible, we ask you to contact our service hotline on the number detailed below.

UK / N. IRELAND HELPLINE NO 0871 37 61 020 REP. IRELAND HELPLINE NO 1-800-992 508

(calls are charges at 7p per min from a standard landline, calls from mobiles could be higher)

Alternatively you can contact us via email by completing the Email product support form which can be found on [www.medion.co.uk](http://www.medion.co.uk)

Medion Electronics Ltd.  
120 Faraday Park  
Faraday Road  
Dorcan  
Swindon SN3 5JF  
Wiltshire, UK



## MICROWAVE WITH GRILL

# WARRANTY CARD

Congratulations! You have made an excellent choice with the purchase of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults during private use within 36 months of the date of purchase we shall be liable for warranty in accordance with statutory warranty regulations provided that:

- The device was not put to use other than the intended
- was not overloaded
- was not used with the wrong accessories
- repairs were not carried out by any other than the intended workshop

The warranty certificate is only valid in connection with an acceptable proof of purchase.

Please keep both in a safe place. This warranty does not affect your statutory rights.

This purchase is guaranteed for a period of three years beginning on the day of purchase. Keep your purchase receipt safe as proof of date of purchase. The guarantee can only be extended for the duration of any repair required.

During the warranty period defective devices can be returned to the service address stated on the back cover of this document by first calling the service hotline number provided to arrange collection by an approved freight agent at no cost to you. We will at our discretion, either repair or exchange the device in accordance with warranty legislation.

Please enclose the following when sending your product in for repair:

1. Proof of purchase (receipt).
2. This warranty certificate with the fault report from overleaf complete with your name, contact details and fault description.

If an acceptable proof of purchase is not enclosed the repair will be charged in all cases. After the warranty has expired defective devices can still be sent to the address stated below. Any repairs outside of the warranty period will be charged and can only be undertaken once payment has been received.

Ensure that the product is sent well packed as no responsibility can be accepted for items lost or damaged in transit.

This warranty does not affect your statutory right.

